


Corin mod. 5670 - 09/12


**STEP**

Assembling instructions  
Notices de pose  
Istruzioni di montaggio  
Montage voorschrift


**5670**

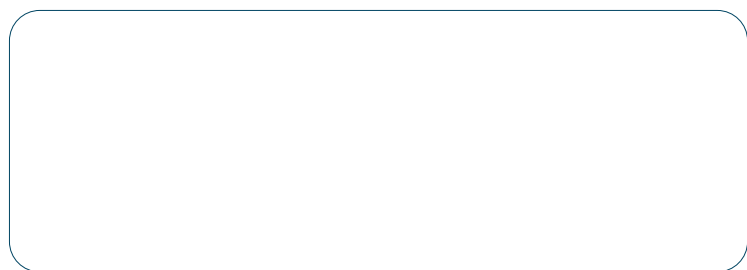




**Corin**

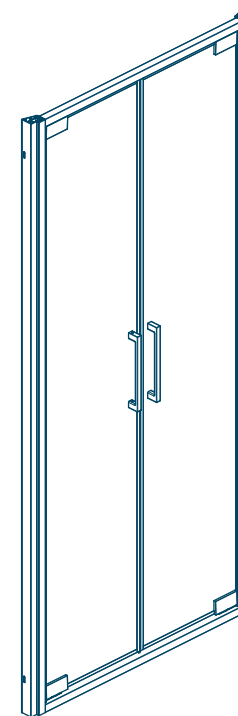


**Corin**

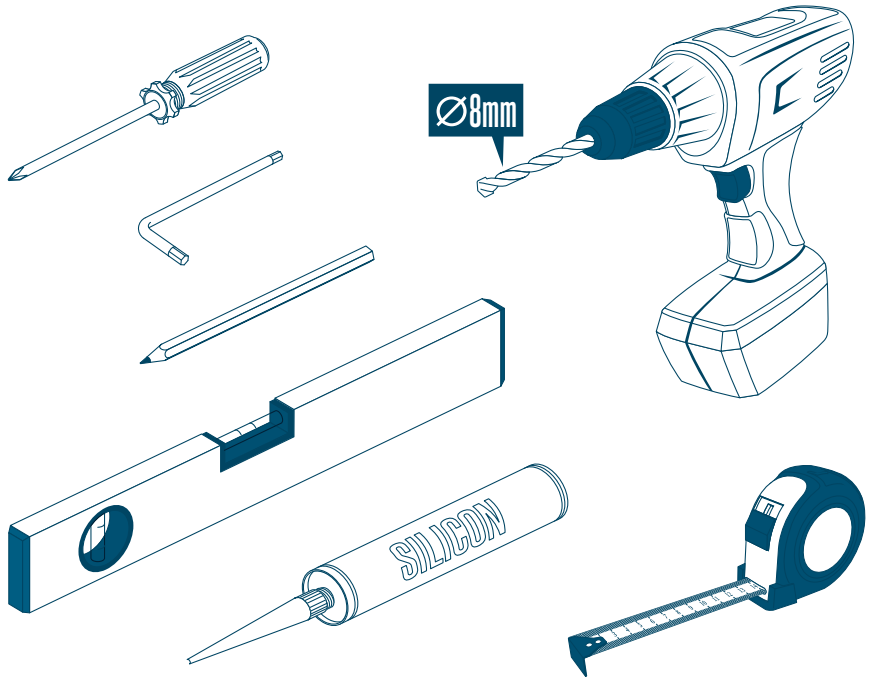


Ø8mm

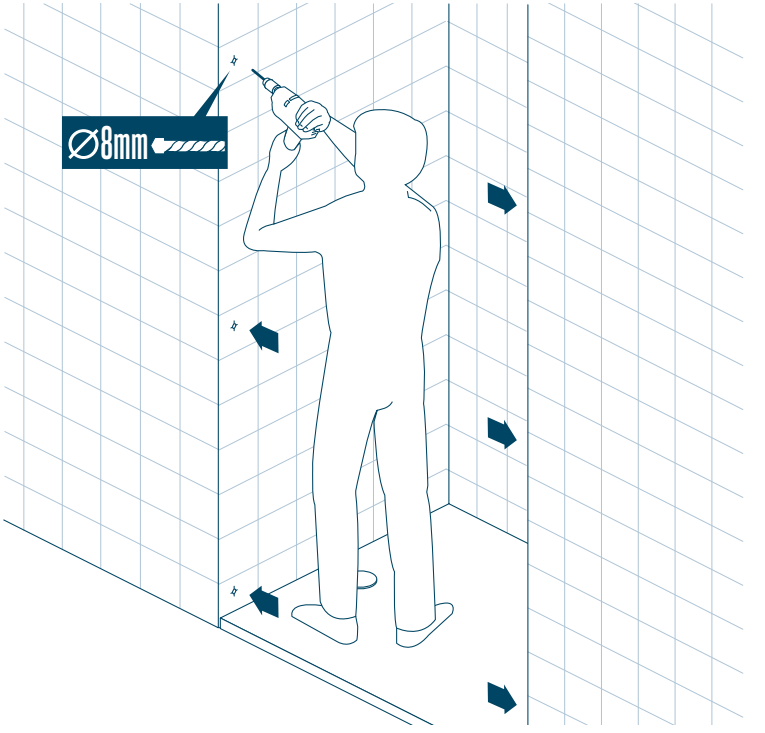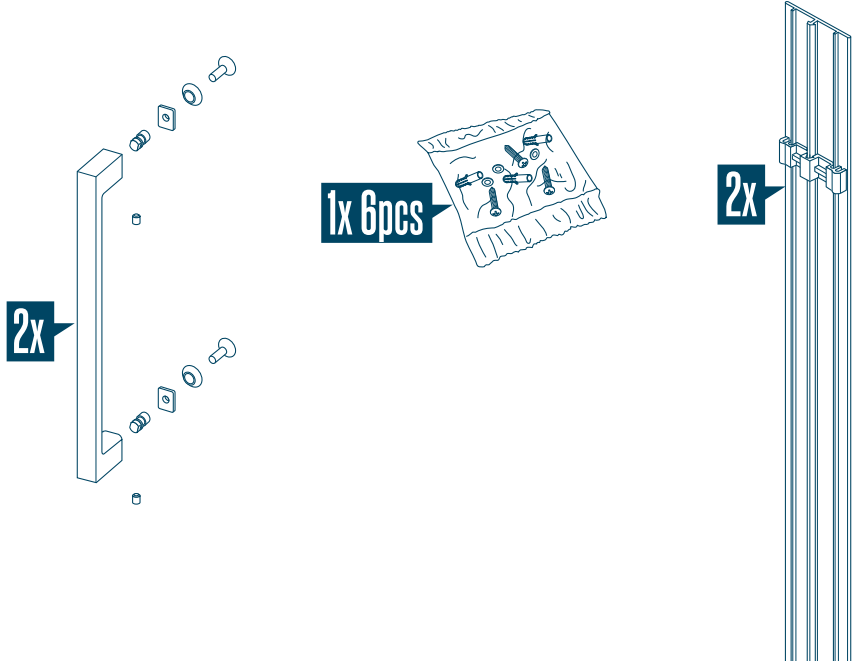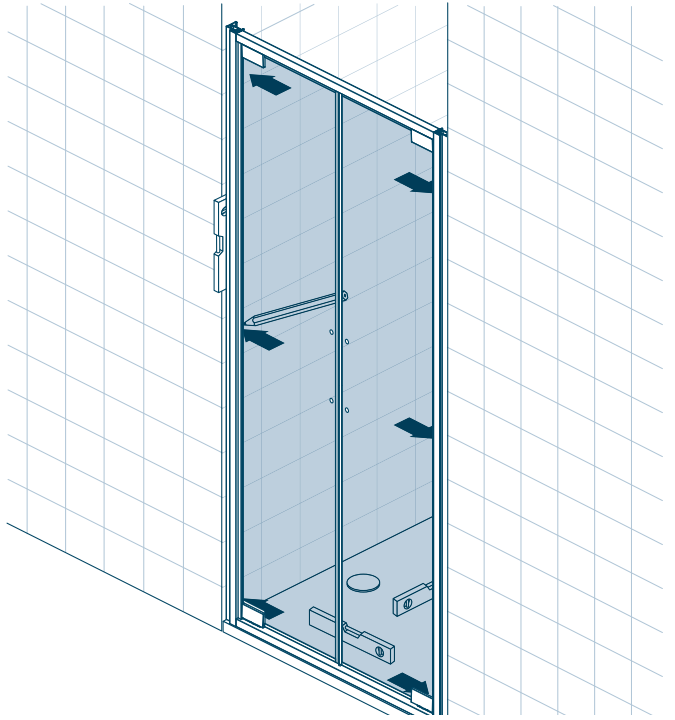


3

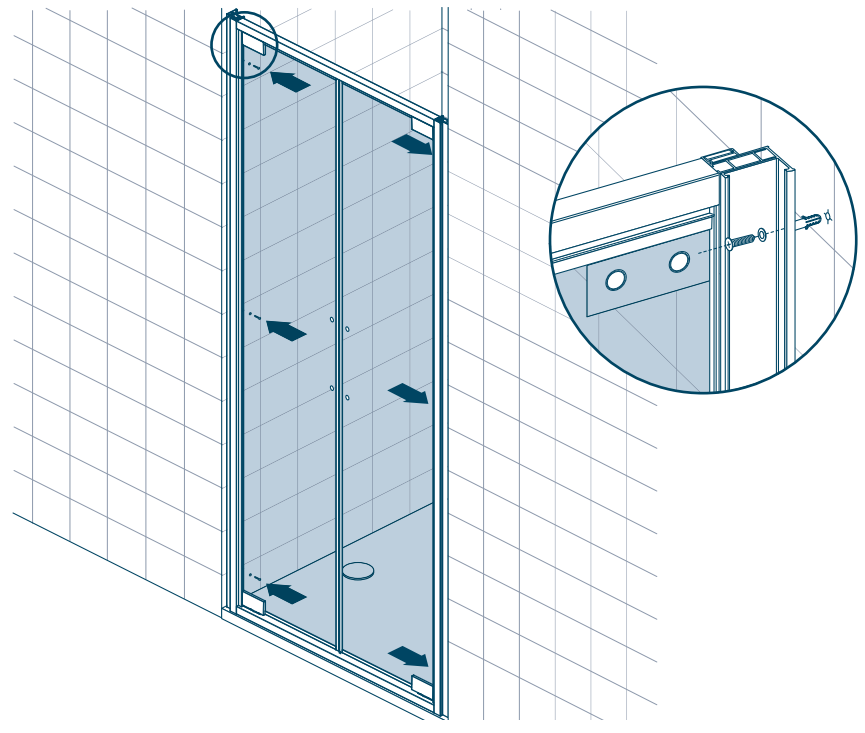


5

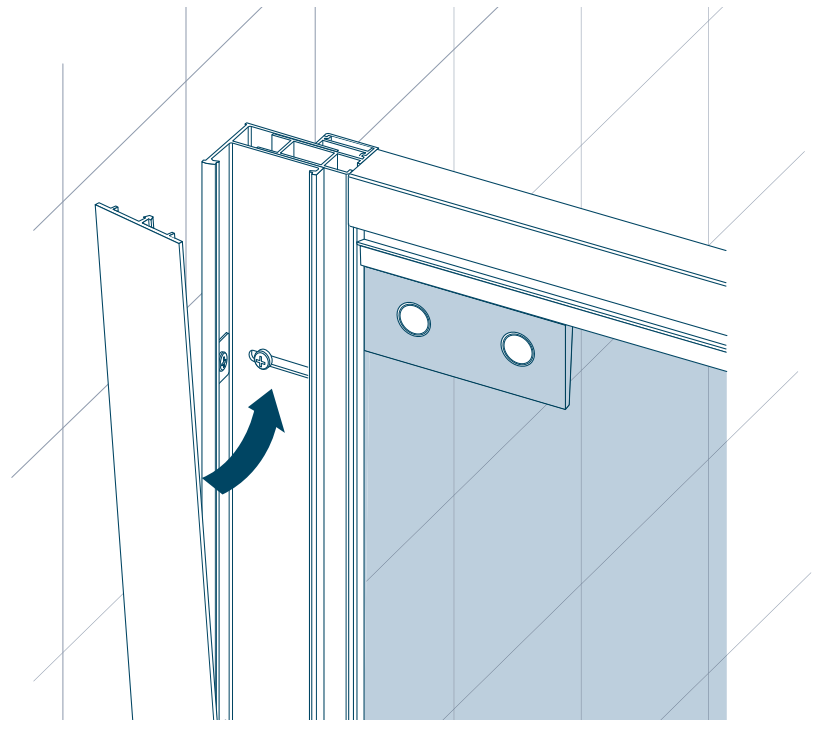

4

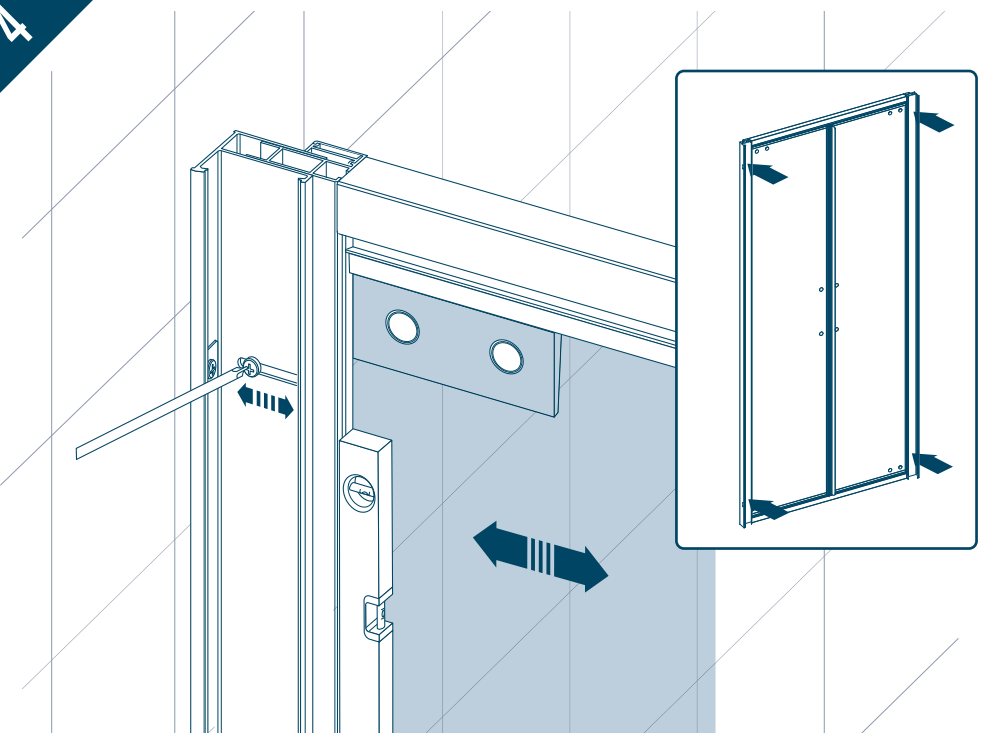


6

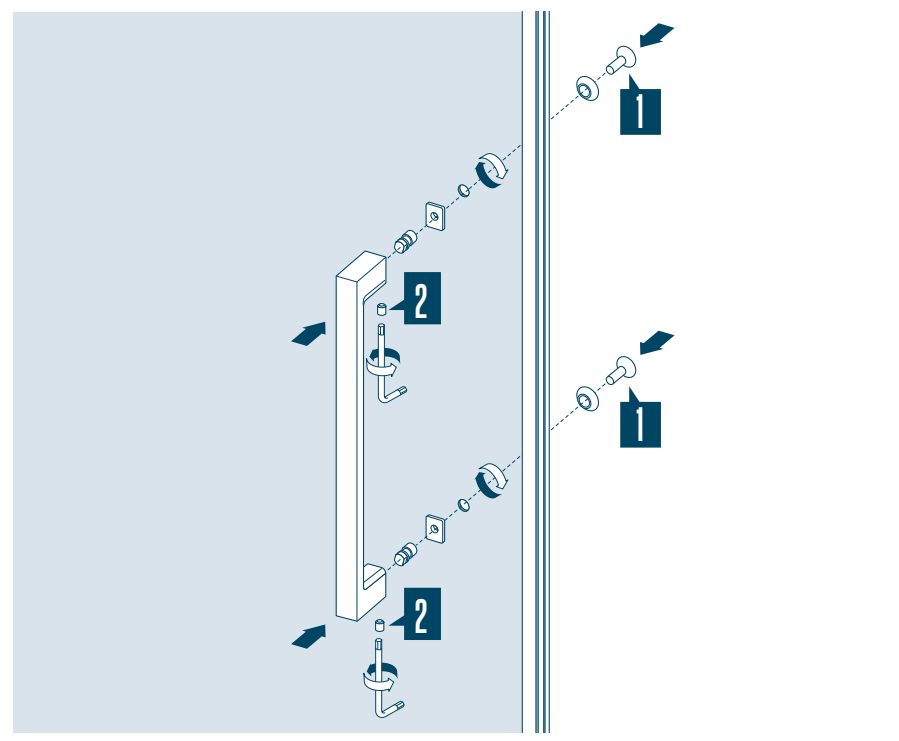


1

Attenzione  
Siliconare solo all'esterno  
Attention  
Siliconer seulement a l'exterieur  
Attention  
Seal only outside  
Attention  
Alleen aan buitenzijde afkitten  
Achtung  
Silikon nur auf der aussenseite  
Atenció  
Siliconar solo por el exterior

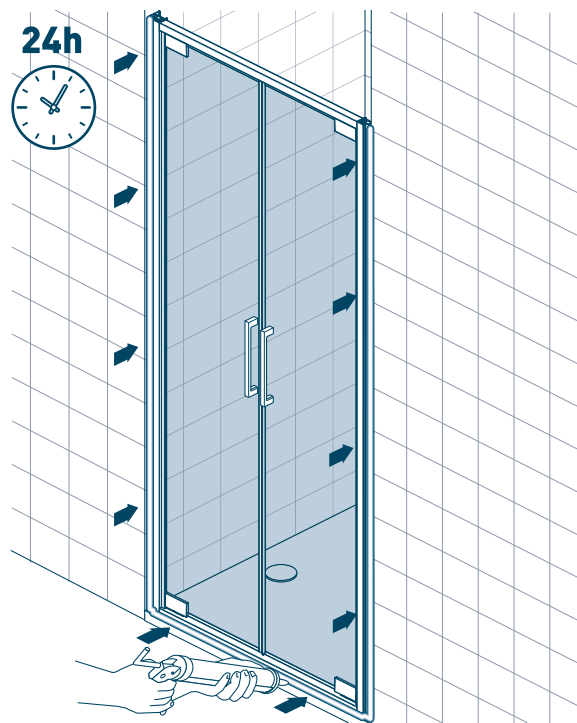


2/1

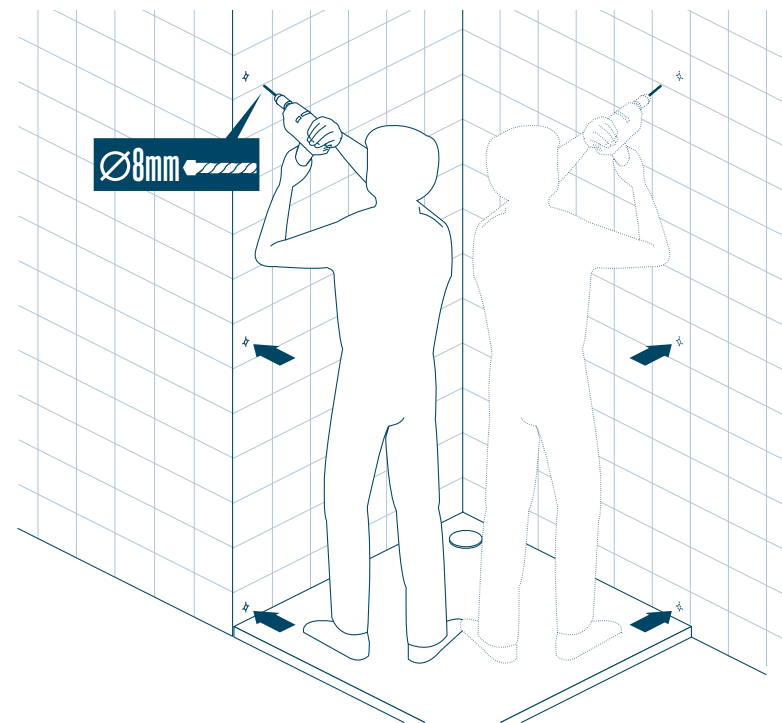


1/1


In caso di combinazione  
con lato fisso art. 8xxxx  
In case of combination  
with return panel art. 8xxxx  
En cas de combinaison  
avec panneau fixe art. 8xxxx  
Im Falle einer Kombination  
mit Rückkehr Panel Kunst. 8xxxx  
Bij combinatie met terugkeer  
paneel kunst. 8xxxx  
En caso de combinación  
con el lado fijo art. 8xxxx

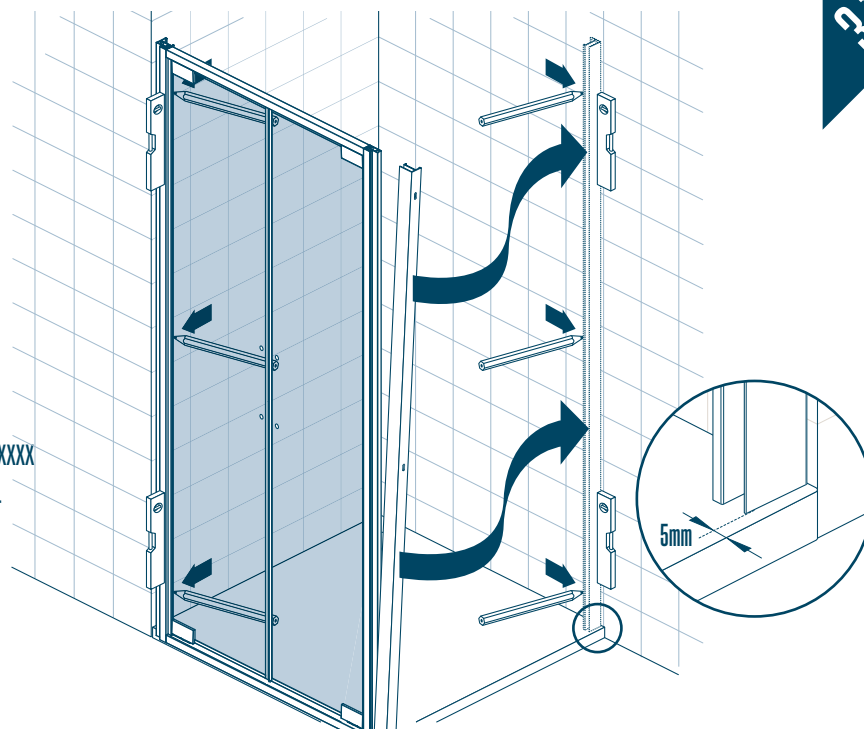


3/1

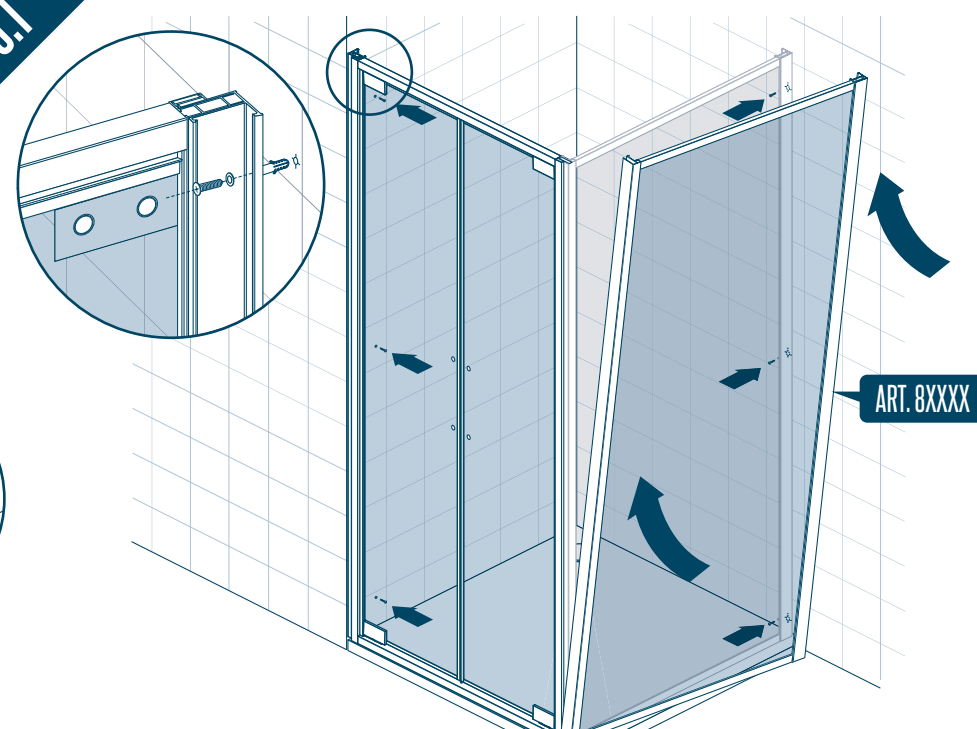

4.1

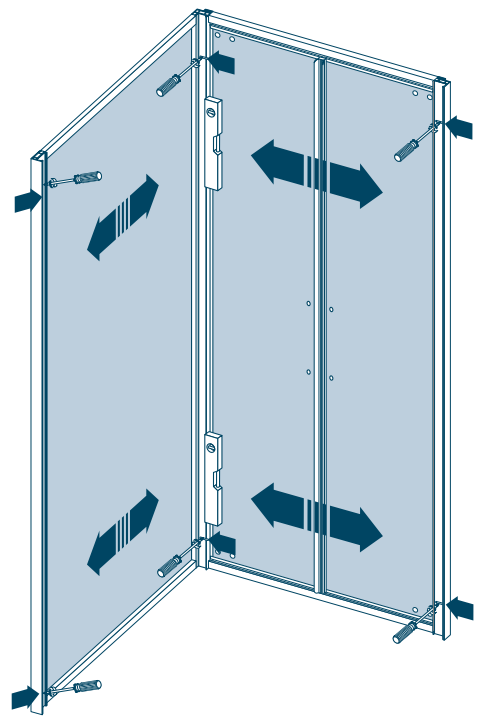

6.1

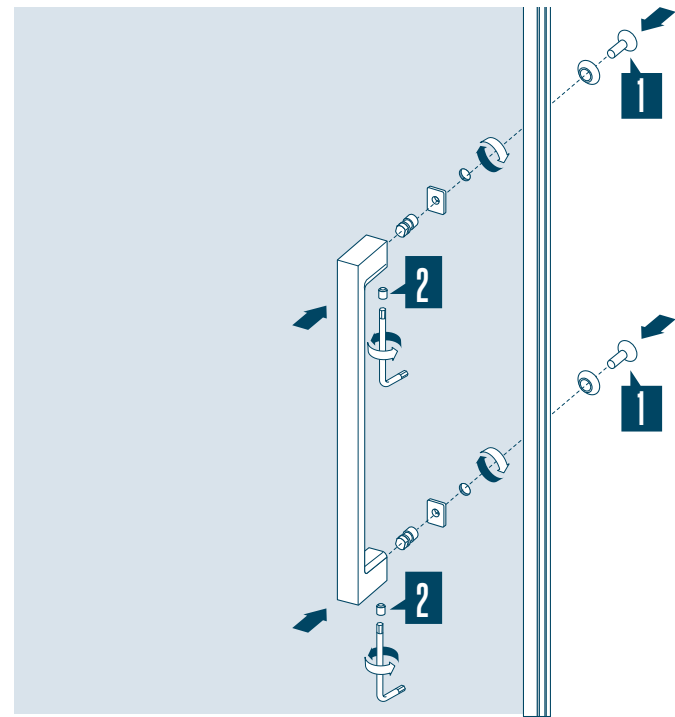

5.1



7.1

Attenzione  
 Siliconare solo all'esterno  
 Attention  
 Siliconer seulement a l'exterieur  
 Attention  
 Seal only outside  
 Attentie  
 Alleen aan buitenzijde afkitten  
 Achtung  
 Silikon nur auf der aussenseite  
 Atenciòn  
 Siliconar solo por el exterior

